



SERVICE POLICY

In the event of you needing to contact the Galaxy Customer Service Department, the following procedure should be followed:-

- 1** Before telephoning the Galaxy Customer Service Department you should ensure that you have the model number, power rating, serial number and date of purchase.
- 2** The Galaxy Customer Service Department will be able to inform you whether the fault can be rectified by the provision of a replacement part or an on site visit by a Qualified Service Engineer.
- 3** If a service call is booked, you or a representative must be present during the Engineers visit.
- 4** A charge will be made where a call under the terms of the guarantee has been booked and a failure was not product related, or an engineer arrives and is not able to gain access.
- 5** If the product is no longer covered by the Guarantee, a charge will be made for the site visit and for any parts supplied.

Customer Service Department

Telephone: 02476 637635 Fax: 02476 637306

9.00 am - 5.00 pm Monday to Friday




Aqua 10000

Instantaneous Electric Shower Installation Instructions

IMPORTANT!

This Step-by-Step guide should be given to the customer after installation and demonstration.

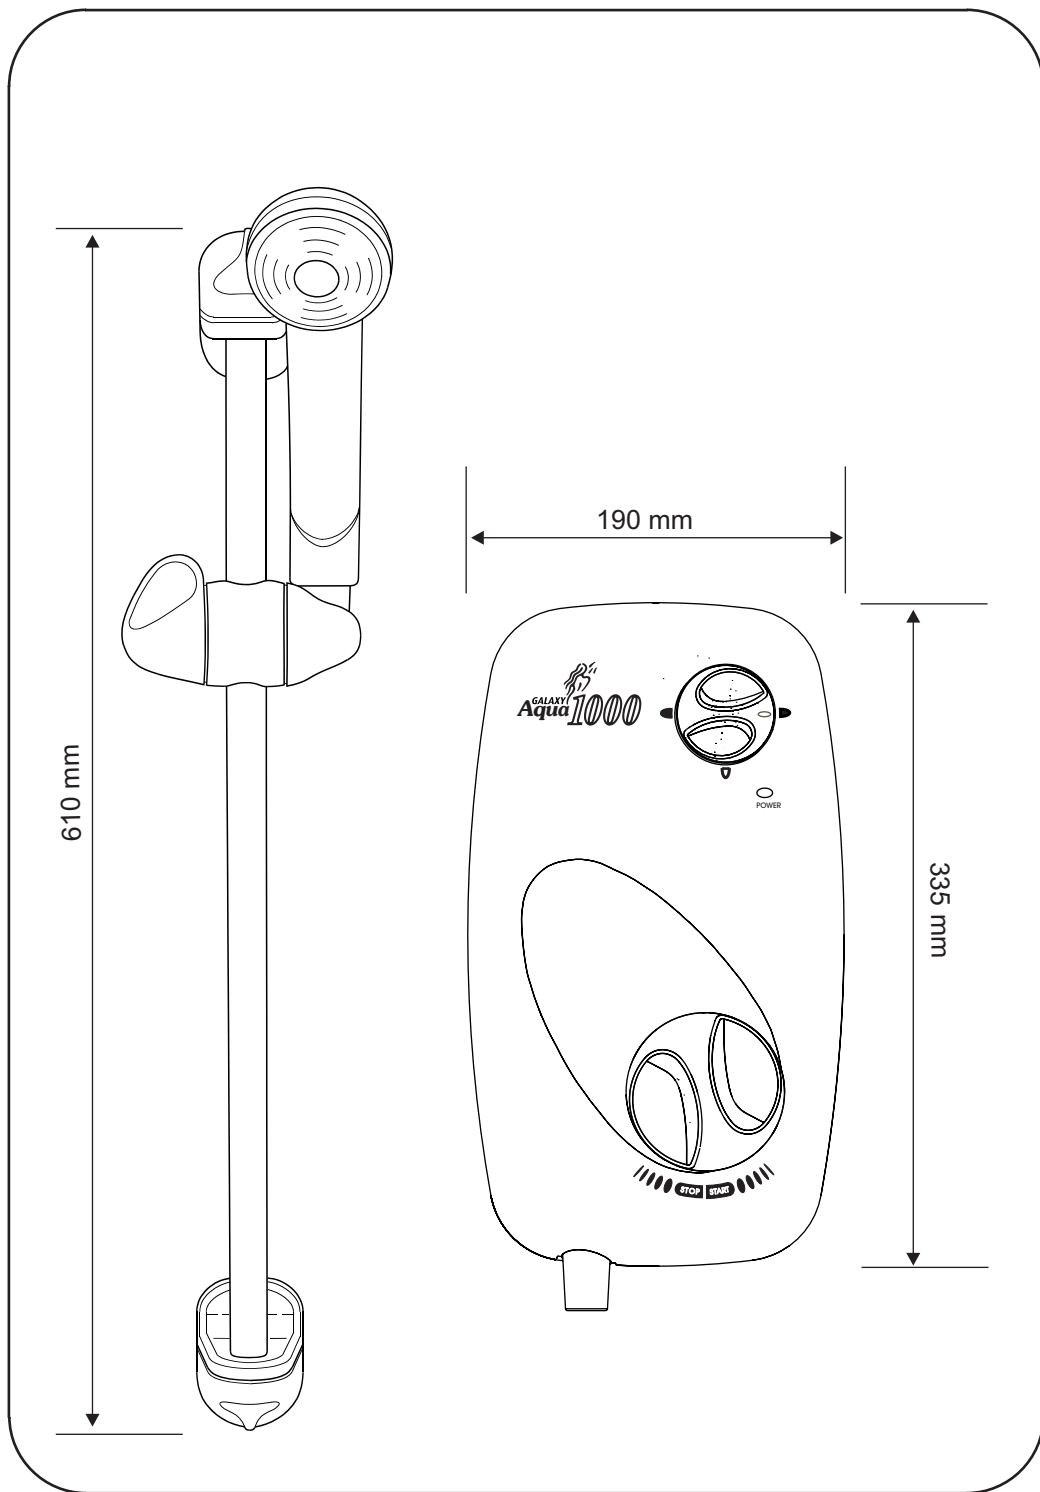

SECTION 1

PACKING CONTENTS

Shower Unit
 Showerhead
 Flexible Hose
 Slider Rail Tube
 Slider Rail Brackets
 Slider Rail Showerhead Holder
 Screw Pack

IMPORTANT

1. Shower installation must be carried out by a suitably qualified person and conform with IEE Regulations and National Water Council bylaws.
2. This shower unit is designed to be connected to a 15mm cold water mains supply.
Do not connect to a tank supply unless a suitable booster pump is fitted.
3. The minimum recommended running water pressure to which the shower heater may be connected is 15 lb/sq in (1 Bar). Running pressure at 8 litres per minute. The maximum static pressure recommended is 150 lb/sq in (10 Bar).
4. The shower unit must not be fitted where it may be exposed to frost, for example in an outdoor shower area.
The shower must not be used if suspected of being frozen.
 Frost damage is not covered by the guarantee.
5. **Plumbers jointing compound must not be used.**
 In instances of difficult joints use P.T.F.E. Tape. The use of compound invalidates the guarantee.

6. All plumbing connections must be completed before making the electrical connections.
7. The outlet of your shower acts as a vent and must **NOT** be connected to any form of tap or fitting not recommended by Galaxy Showers Ltd.
8. Always switch off at the isolating switch when not in use.

SECTION 2

GENERAL ADVICE TO SHOWER UNIT USERS

The following points will help you to understand how your Galaxy shower unit operates.

The flow rate of water passing through the shower unit determines the water temperature. The lower the flow the warmer the water, the higher the flow the cooler the water.

The temperature produced by the shower unit will vary between seasons on any one setting of the temperature control. This is due to variance in the temperature of the water supply, which becomes cooler in winter than summer.

The stabiliser valve maintains an almost constant shower temperature during mains water pressure changes.


If changes in temperature are experienced in normal use, it is likely to be caused by water pressure falling below the minimum level. Falls in water pressure may be due to water being drawn off at other points within the building.

The shower head must be cleaned regularly to remove scale and debris. If the water becomes hot and you are unable to obtain cooler water, check the shower head for blockage.

SECTION 3

GENERAL LAYOUT OF A SHOWER INSTALLATION

A TYPICAL INSTANTANEOUS ELECTRIC SHOWER INSTALLATION

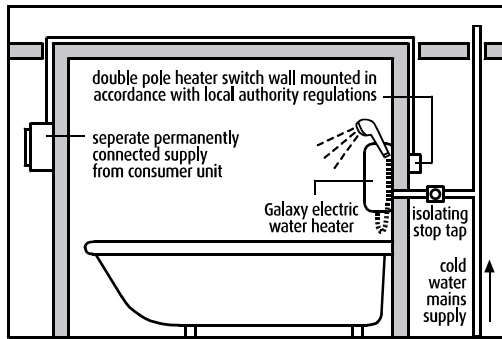

Plan your own installation carefully. Check on the nearest and most readily accessible rising mains water supply, this may be beneath the bath or in the loft, where it feeds the cold water storage tank. Use only the cold rising water main supply. **Do not connect the shower unit to the down service from the tank.**

Avoid connecting the shower unit, if possible, where it will be affected by water drawn off by other appliances, e.g. From the mains feed to the W.C., This may cause a drop in pressure too low for the shower unit to work correctly.


An isolating valve must be fitted into the water supply for servicing purposes.

SECTION 4

INSTALLATION

Position your shower unit on the wall away from the direct spray of the shower and at about the same height as the shower head position.

The shower unit should be positioned so that the shower head cannot be immersed in the bath or shower tray when hanging down.

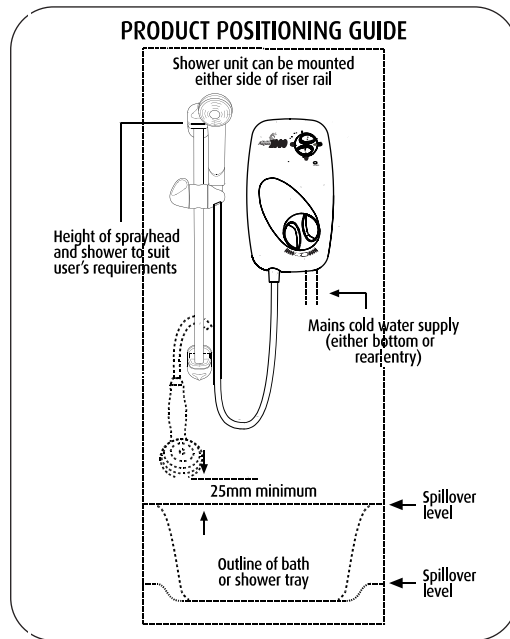

Remove the two screws securing the shower unit cover and remove the cover complete with the control knobs.

Place the shower unit on the wall and mark the location of the fixing screws through the back plate.

Carefully drill the holes as marked using a sharp 5.5mm masonry drill.

Fix the shower unit to the wall using the plugs and screws provided, do not fully tighten at this stage.

IMPORTANT

To comply with National Water Council bylaws a double check valve must be fitted with all flexible shower accessories where it is possible that the shower head may come into contact with used water i.e. In the bath or shower tray.


SECTION 5

PLUMBING CONNECTION

Plumbing the shower unit must precede wiring.

Turn off the water supply at the isolating stop tap.

Determine the direction of the inlet water supply: **Bottom** (rising), or **Back** inlet.

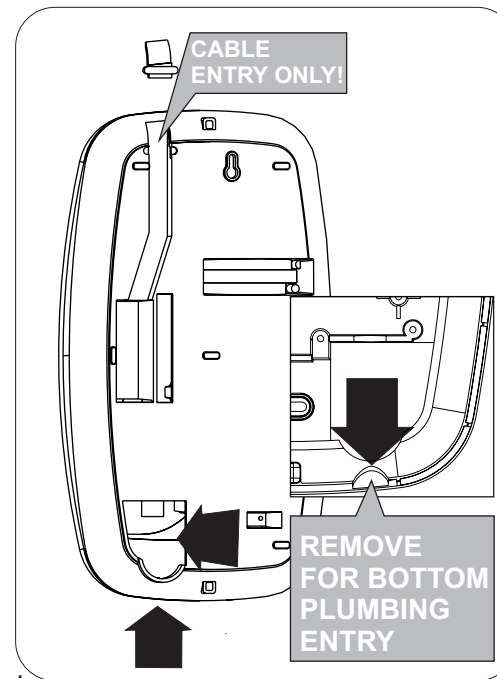

Connect the mains water supply to the inlet of the shower unit using a 15mm copper or stainless pipe with a 15mm compression elbow or 15mm push-fit elbow. **Do not use excessive force when making the connection to the unit.**

The back plate and the trim plate are fitted with removable inserts for fitting over the pipework to the shower unit.

IMPORTANT

Before turning on the water supply to the shower unit the water supply pipe should be flushed out to remove debris. This can be achieved by connecting the flexible hose to the 15mm compression elbow and turning on the mains water supply long enough to clear the debris.

After flushing the pipework ensure that the shower unit is positioned squarely on the wall and tighten the screws. Tighten all plumbing connections and check the pipework for leaks.

SECTION 6

ELECTRICAL CONNECTION

Warning! This appliance must be earthed

The shower unit must be permanently connected to the electricity supply, direct from the consumer unit via a double pole linked switch with a minimum contact gap of 3mm. The switch must be readily accessible and clearly identifiable and out of reach of a person using a fixed bath or shower tray, unless the switch is cord operated. The wiring must be connected to the switch without the use of a plug or socket outlet.

The cable size required is determined by the kW rating of the shower and the distance between the shower and the consumer unit. The table below will help you choose the correct cable for your installation, but it will depend upon the precise circumstances of the installation. If you are in any doubt consult an electrician.

KW RATING	NOMINAL AT 240v	MIN RATING OF ISOLATING SWITCH	FUSE RATING	MAX CABLE RUN	
				6mm	10mm
7.0	29.10amps	30 amps	30 amps	29m	48m
7.5	31.25amps	40 amps	40 amps	27m	44m
8.0	33.33amps	40 amps	40 amps	25m	42m
8.5	35.41amps	40 amps	40 amps	23m	38m
9.5	39.58amps	40 amps	40 amps	21m	32m
10.5	43.75amps	45 amps	45 amps	18m	30m

The incoming cable should be hidden.

Connect the live cable to the terminal marked **L**.

Connect the neutral cable to the terminal marked **N**.

Connect the earth cable to the terminal marked **E** on the back plate.

IMPORTANT

Ensure that the terminal block screws are fully tightened and that no cable insulation is trapped under screws,

Ensure the cable clamp is used to secure the cable.

The earth continuity conductor of the electrical installation must be effectively connected to all exposed metal parts of other appliances and services in the room in which the shower unit is installed to confirm with IEE regulations.

SECTION 7

FITTING THE COVER INTO POSITION

Note: It is necessary to engage the knobs in the correct position on to the spindles before the cover is located.

Secure the cover with the two fixing screws provided.

DO NOT switch on the power to the shower unit at the consumer unit and the double pole switch.

Remove the shower head from the flexible hose and point to waste.

IMPORTANT: Turn the bottom flow control knob anti clockwise until the valve is fully open. This will ensure a fast fill up of the shower unit.

At this stage the power selector knob should be in the **OFF** position (*Outline Blue Symbol*).

IMPORTANT: The shower unit must be full of water before heat settings are used.

Let the water flow through the shower unit to release any air which may be in the system and fill the shower unit with water.

Turn the bottom temperature control knob fully clockwise to stop the flow.

Re-fit the shower head to the flexible hose.

Your shower is now ready to use. We recommend that you allow your shower to reach a stable temperature before you commence showering.

SECTION 8

RISER RAIL FITTING INSTRUCTIONS


TIPS

A piece of insulating or masking tape applied to the wall before marking out the fixing holes will help stop the drill from wandering, particularly on tiled surfaces. When working near a basin or bath, insert the plug in the waste fitting so that small parts cannot be lost.


Take care not to drop accessories or tools into basin or bath.

CAUTION


Check there are no hidden cables or pipes before drilling holes for wall plugs. Exercise great care when using power tools near water. The use of a residual current device (RCD) is recommended.

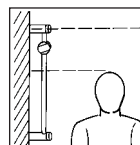


1. Establish position for the riser rail, and mark the wall for the lower mounting bracket. Make allowances for the tallest person likely to use the shower regularly.

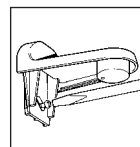


2. Use a No 10/5.5mm masonry drill to make a hole 35mm deep, and fit the wall plug. (NB some wall constructions may require the use of alternative types of wall fixings). Screw the lower bracket base to the wall.

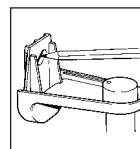


3. Locate the crimped end of the riser rail (Figure 4) into the mounting bracket, then fit the upper bracket. Ensure the rail is vertical, then mark the wall for the fixing.

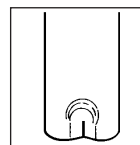


4. The crimped end of the riser rail. NOTE If it is necessary to shorten the rail, use a junior hacksaw to cut the excess material from the plain end of the rail.

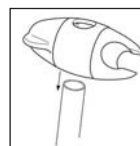


5. With the showerhead height adjuster lever set a 3 o'clock and the showerhead holder in the upright position, slide the assembly onto the rail. Tighten to the rail by turning the lever.

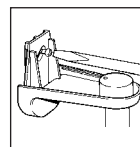

6. Re-assemble the rail and screw the upper mounting bracket in place.

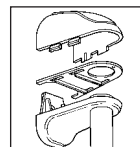

7. Clip the end cap onto the mounting brackets.

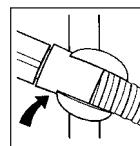

8. Firmly attach flexible hose to the showerhead making sure sealing washer is in place. NOTE the adjustable slider grips the conical end of the hose, not the handle of the showerhead.

Maintenance: Clean regularly with a non-abrasive liquid bathroom cleaner.

SECTION 9

COMMISSIONING THE SHOWER

IMPORTANT: The shower unit must be full of water before power (heat) settings are used.

1. Make sure that the electrical supply has been isolated at the double pole isolating switch.

2. Ensure the water supply is fully on at the mains stop cock and isolating service valve (if fitted), check that water is not leaking from the bottom of the case.

3. Turn the bottom temperature control knob anti-clockwise to the full cold position.

4. Turn the top power selector knob to the 'Cold' setting (*Solid Blue Symbol*).

5. Switch on the electrical supply at the double pole switch. The 'Power' neon indicator will light.

6. Check that water flows freely from the shower within a few seconds. The water from the showerhead will be at full force and at a cool temperature.

7. Rotate the bottom temperature control knob slowly clockwise fully. This will gradually reduce the flow with the water temperature remaining cool.

8. Return the knob anti-clockwise to maximum flow.

9. Now turn the top power selector knob to the 'Low' setting (*Outline Red Symbol*). Allow a few seconds for the warmer temperature to reach the showerhead - this shows that the 'Low' power setting is operating correctly.

10. Now turn the top power selector knob to the 'High' setting (Solid Red Symbol). The temperature at the showerhead will rise further - this shows that the full power setting is operating correctly.

11. Turn the bottom temperature control knob clockwise for hotter water and anti-clockwise for cooler water. Allow a few seconds between selections - for the temperature change to reach the showerhead.

NOTE. When the temperature is changed the flow rate alters.

12. Turn the bottom temperature control knob fully clockwise to stop the flow.

SECTION 10 OPERATING THE SHOWER

1. Switch on pull-cord or wall mounted switch. The 'Power' neon will illuminate indicating the switch is on.

2. Turn the bottom temperature control knob anti-clockwise to obtain water flow and select the No.6 position.

3. Select your power setting using the top control. The shower has three positions 'Cold', 'Low' power and 'High' power.

'Cold' setting (Solid Blue Symbol):

Adjustment of the flow control on this setting will only alter the flow of water not the water temperature.

'Low' setting (Outline Red Symbol):

This is the low power setting for economy during warmer months or when a cool shower is required.

Temperature adjustment is via the bottom temperature control.

'High' setting (Solid Red Symbol):

This is the full power setting. Temperature adjustment is via the bottom temperature control.

4. Wait a few seconds for the warmer water to reach the handset.

5. If necessary turn bottom 'Temperature' control knob slowly to obtain desired showering temperature. Again, waiting a few seconds after each adjustment in temperature to reach the handset.

Note:

To adjust the shower temperature. The water temperature is altered by increasing or decreasing the flow rate of water through the shower unit via the temperature control.

To increase the shower temperature

Turn the temperature control knob clockwise, this will decrease the flow of water and increase the shower temperature.


To decrease the shower temperature

Turn the temperature control knob anti-clockwise, this will increase the flow of water and decrease the shower temperature.

6. Turn the bottom temperature control knob fully clockwise to stop the flow.

7. A small amount of water will be retained in the showerhead after the shower has been turned off. This may drain over a few minutes.

8. Switch of pull-cord or wall mounted switch.

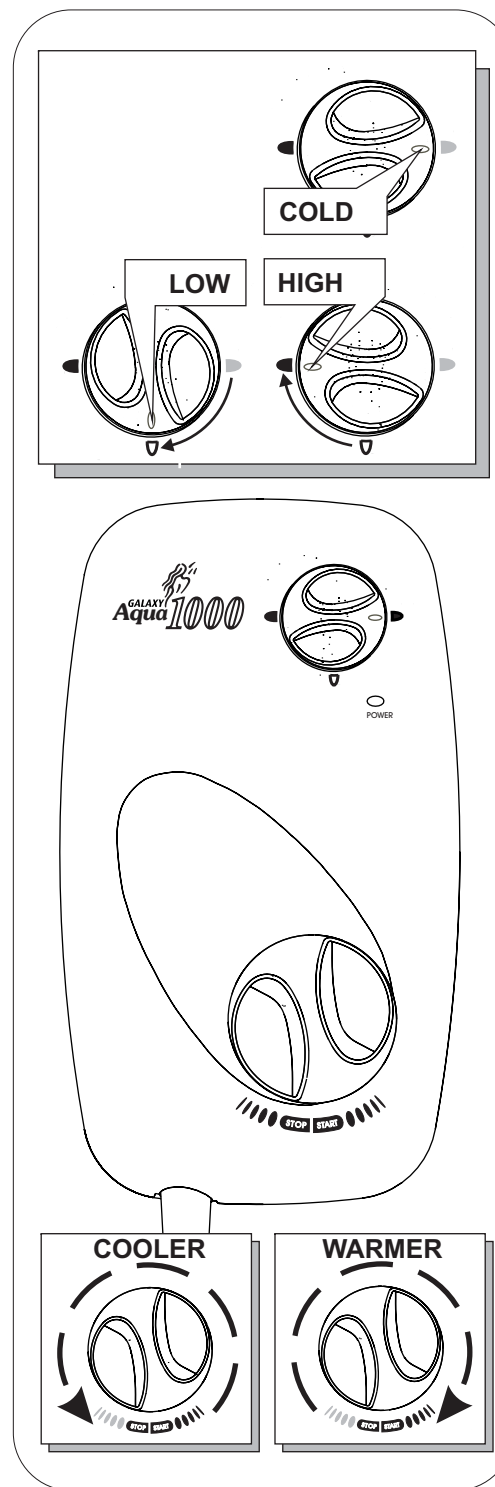


SECTION 11 OPERATING FEATURES

Power Neon Indicator


The 'Power' neon indicator will be illuminated when the shower unit is switched on and water is flowing on the heat settings. The light will not come on when the shower unit is on the cold setting.

SECTION 12 SHOWERHEAD CLEANING INSTRUCTIONS


The showerhead should be cleaned periodically to remove limescale or debris which will reduce the performance of the shower. The frequency of cleaning will vary according to local water quality. In hard water areas cleaning will be needed more often than in soft water areas. A liquid non-abrasive bathroom cleaner may be used on external surfaces of the handset.

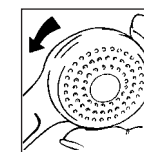


1. Remove the spray plate from the showerhead by unscrewing in a anti-clockwise direction.

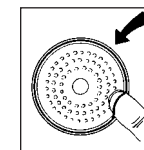


2. Detach the 'O' ring from the rim of the spray plate.

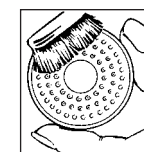

3. Scrub the spray plate with a small, stiff bristled brush. Rinse 'O' ring clean to remove stubborn limescale deposits. **DO NOT** use a pin or similar implements to clear the holes otherwise the efficiency of the shower spray will be impaired.

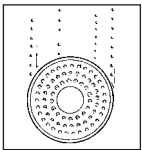


4. If deposits are stubborn, immerse and soak the spray plate for several hours in a proprietary limescale remover.

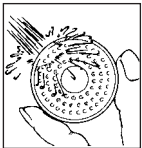


5. Ensure all traces of scale and limescale remover are rinsed off.



3. Brush and rinse the inside of the showerhead.

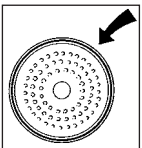

7. Refit the 'O' ring to the spray plate, ensuring it is correctly seated in the groove. NOTE: If the seal is incorrectly fitted, water will seep between the handset body and spray plate assembly.

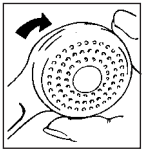

8. Refit spray plate to the handset body, taking care not to overtighten.



GUARANTEE

Galaxy Showers Limited guarantee this product for a period of two years, from date of purchase, against mechanical and electrical defects arising from faulty materials or from poor workmanship, providing the product has been installed by a competent person in accordance with the fitting instructions.

Galaxy Showers Limited undertake to repair or replace, at their discretion, without charge, provided the product has been properly maintained and operated in accordance with the operating instructions. Any component found to be defective during this period, as the result of misuse or damage, or the effects of scaling, will not be covered by this guarantee.

This product must not be modified, repaired or taken apart except by a person authorised by Galaxy Showers Limited.

This Guarantee is only valid within the United Kingdom and does not cover product used commercially.

This Guarantee does not affect your statutory rights.

Galaxy Showers Ltd., Unit 1, Holbrook Park Estate (Off Kingswood Close)
Holbrooks, Coventry Cv6 4AB
Telephone: 02476 637635 - Fax: 02476 637306.